


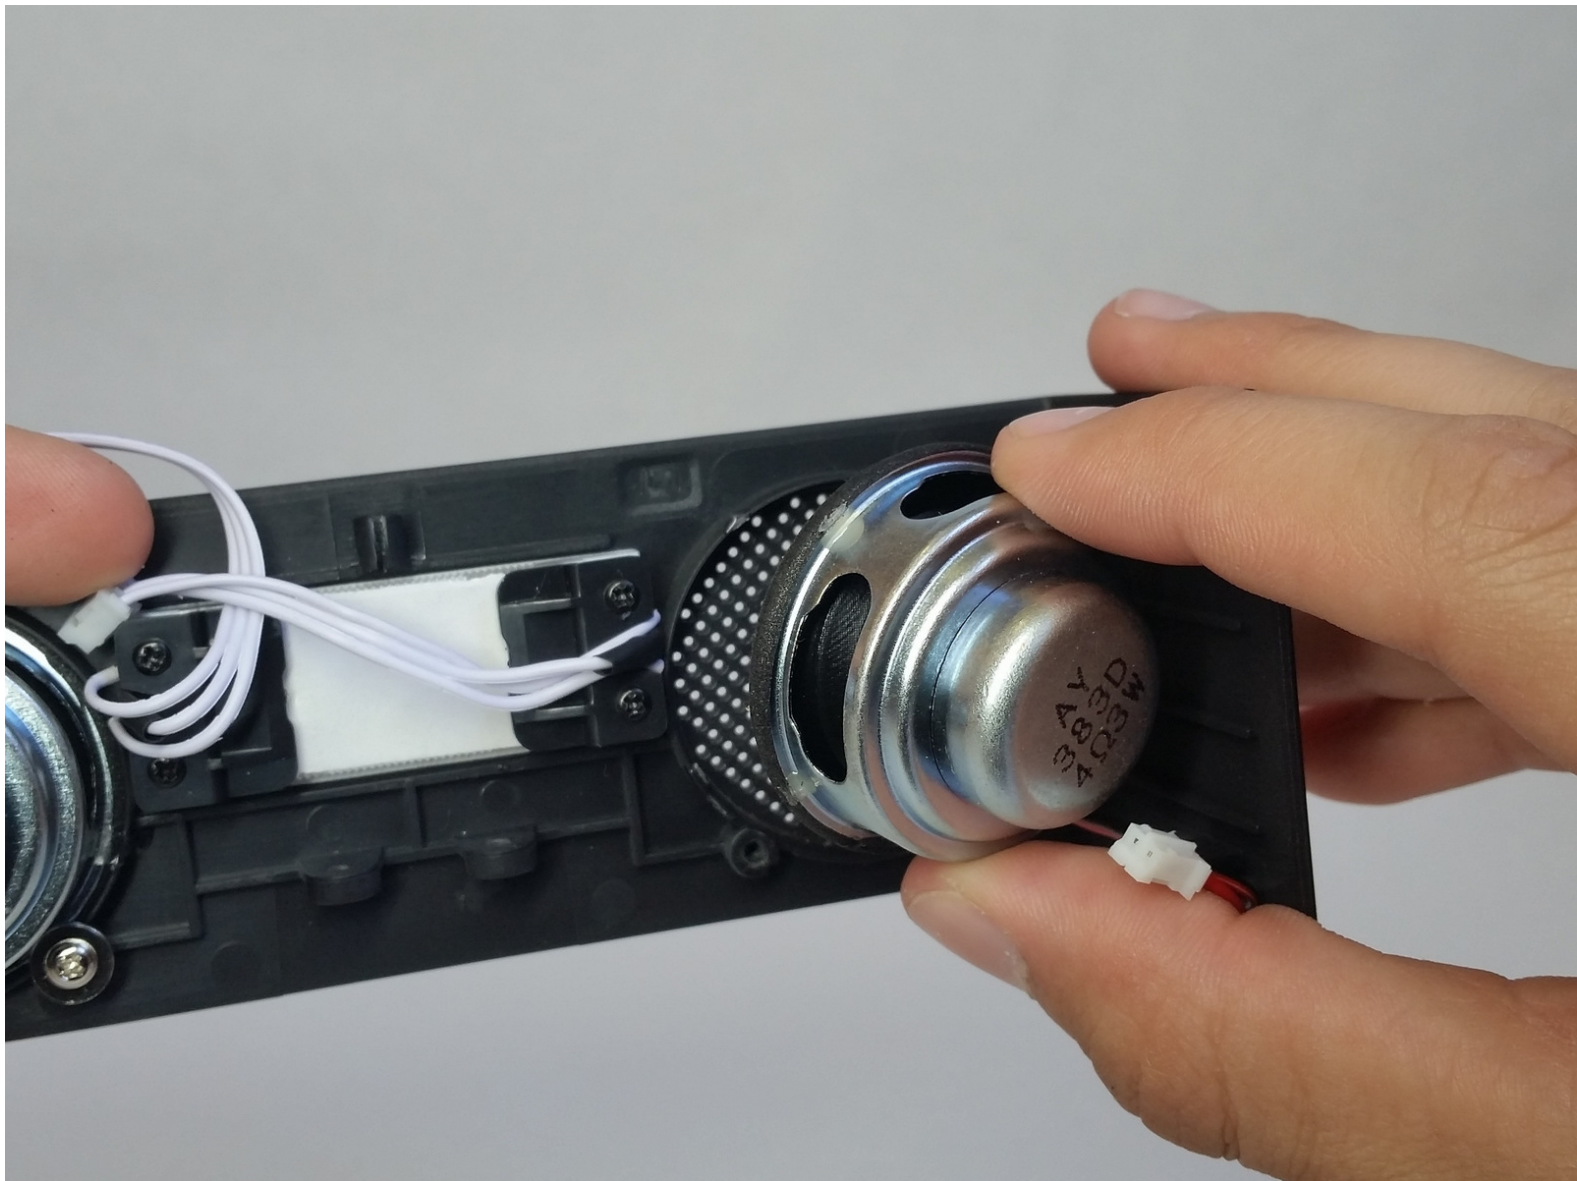

Photive Artisan Portable Bluetooth Speaker Replacement

Replace a speaker in the Photive Artisan Portable Bluetooth Speaker.

Written By: David Lennon



INTRODUCTION

Use this guide to replace a broken speaker.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-


Step 1 — Front Panel



⚠ Before continuing, be sure your device is powered off.

- Remove two 9mm Phillips #0 head screws from the bottom side of the speaker.

Step 2

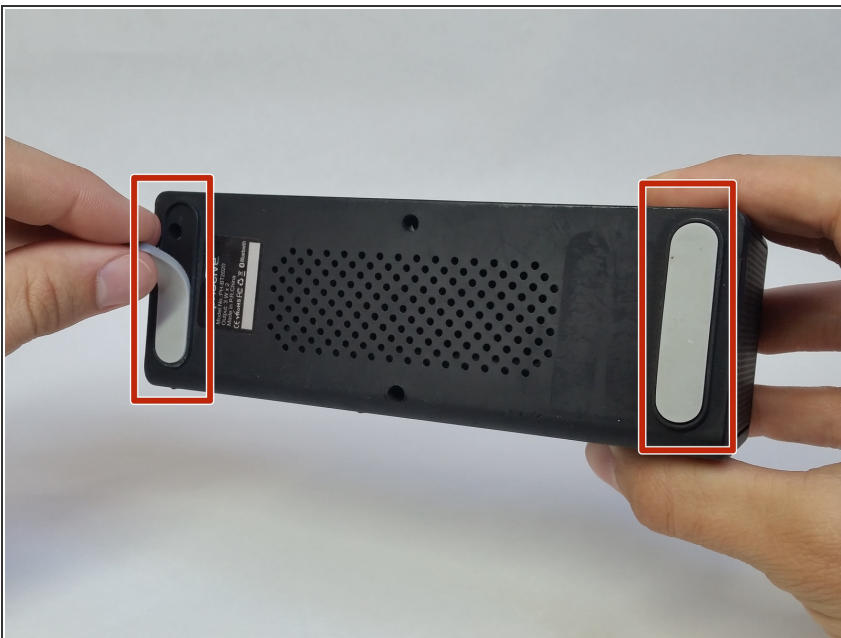

- Peel back the rubber feet from either side of the base.

Step 3




- Remove four 9mm Phillips #0 head screws from the bottom of the speaker.

Step 4




- Separate the base of the speaker from the upper housing.

Step 5

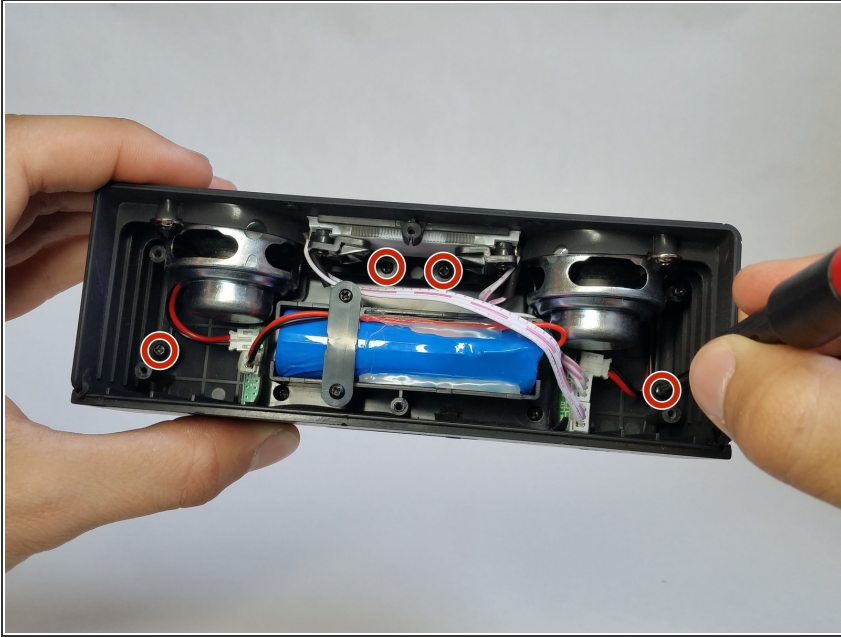


- Remove four 9mm Phillips #0 head screws from the inside of the speaker case.

Step 6

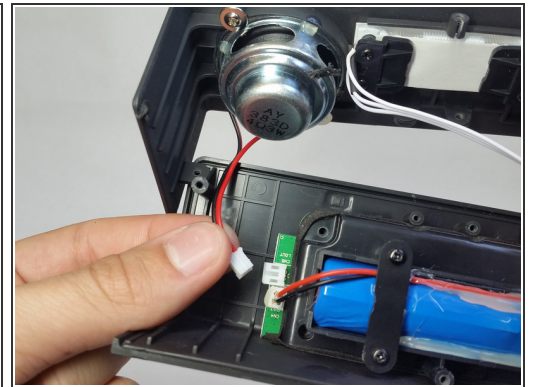


- Remove all cable connectors from the speaker motherboard.

Step 7 — Speaker

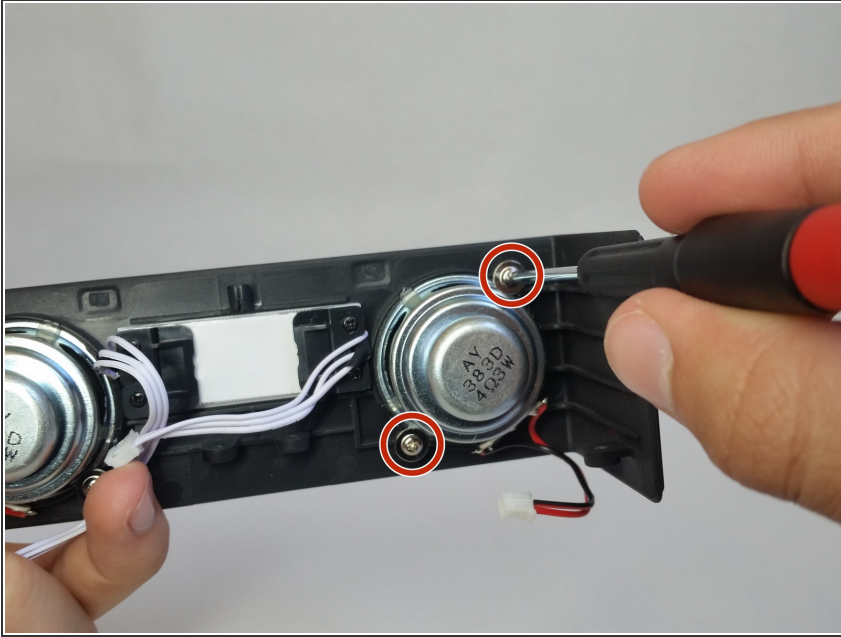

- Remove two 7mm Phillips #0 head screws from the front panel.

Step 8

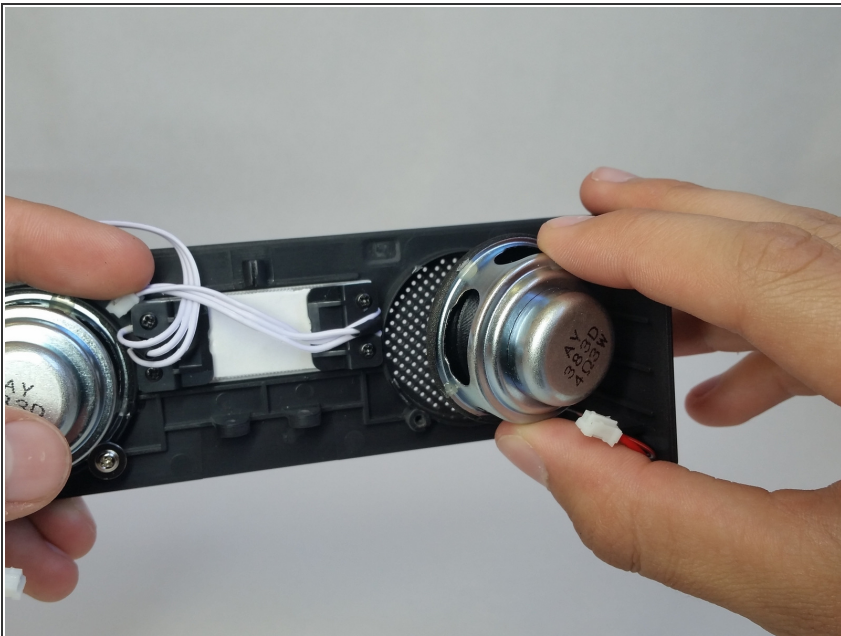

- Lift the speaker from its housing.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-28 08:16:40 AM.